



Assembly Guide for Plastic Mounting Kits for 1982-2004 Ford, GM and Mopar Vehicles



The information enclosed in this installation manual is to be used as a guide to assist you during the process of installation. This guide does not cover every installation possibility, vehicle, or every aspect of the installation process.

Retro Manufacturing, LLC, RetroSound®, or its subsidiaries, assume no responsibility for any installation. This manual may be updated from time to time.

Please check our website for the latest updates: retrosound.com.

Table of Contents (GM Applications)

BUICK		
Century 1982-96*	7	
Electra 1984-94*	7	
Estate wagon 1984-94*	7	
LeSabre 1984-94*	7	
Park Ave. 1984-94*	7	
Reatta 1990-91*	7	
Regal 1984-87*	7	
Riviera 1983-85*	7	
Riviera 1990-95*	7	
Roadmaster 1991-94	8	
Skyhawk 1982-89*	9	
Skylark 1983-85*	9	
Skylark 1987-89*	9	
Skylark 1990-95*	9	
CADILLAC		
Cimarron 1982-88	8	
DeVille 1985-93*	9	
Eldorado 1984-91*	9	
Escalade 1999-02	10	
Fleetwood 1985-93*	9	
Seville 1984-91*	9	
CHEVROLET		
Astro 1985-89	12	
Astro 1990-95	10	
Astro 1996-02	9	
Beretta 1991-96	14	
Blazer (full) 1989-91*	9	
Blazer 1998-02	15	
Camaro 1982-84	16	
Camaro 1985-92	16	
Camaro 1997-99	15	
Caprice 1991-93	8	
Caprice 1994-96	15	
Cavalier 1982-90	8	
Cavalier 1991-94	12	
Cavalier 1995-99	15	
Celebrity 1982-83*	9	
Celebrity 1984-87*	9	
Citation II 1985*	9	
Corsica 1991-96	14	
Corvette 1984-89*	9	
Corvette 1997-02	15	
El Camino 1985-88	16	
Express 1996-00	10	
Impala SS 1994-96	15	
Lumina 1990-94	11	
Lumina 1995-99	11	
Lumina APV 1990-95	11	
Lumina APV 1996	11	
Malibu 1997-99	15	
Monte Carlo 1985-88	16	
Monte Carlo 1995-99	15	
Nova 1985-88	13	
Pickup 1995-02	10	
S10 Blazer 1982-85	17	
S10 Blazer 1986-94	18	
S10 Pickup 1982-85	17	
S10 Pickup 1986-93	18	
S10 Pickup 1998-02	15	
Silverado 1999-02	15	
CHEVROLET (cont.)		
Suburban 1989-91*	9	
Suburban 1995-02	10	
Tahoe 1995-02	10	
Van (full) 1988-95	13	
Venture 1997-99	15	
GMC		
Jimmy (full) 1989-91*	9	
Jimmy 1998-02	10	
S15 Jimmy 1982-85	17	
S15 Jimmy 1986-94	18	
S15 Pickup 1982-85	17	
S15 Pickup 1986-93	18	
Safari 1985-89	12	
Safari 1990-95	13	
Safari 1996-02	10	
Savana 1996-00	17	
Sierra 1995-02	10	
Sonoma 1998-02	15	
Suburban 1989-91*	9	
Suburban 1995-99	10	
Van (full) 1988-95	13	
Yukon 1995-02	10	
OLDSMOBILE		
Achieva 1992-95*	9	
Bravada 1991-94	18	
Cutlass Calais 1984-91*	9	
Cutlass Ciera 1982-96*	9	
Cutlass Supreme 1984-88*	9	
Delta 88 1986-88*	9	
Firenza 1982-89*	9	
Ninety-Eight 1984-90*	9	
Omega 1983-84	16	
Silhouette 1990-95	11	
Silhouette 1996	11	
Silhouette 1997-99	15	
Toronado 1982-85*	9	
PONTIAC		
6000 1982-91	17	
Bonneville 1982-86*	9	
Bonneville 1987-93*	9	
Bonneville 1994-99	19	
Fiero 1984-88*	9	
Firebird 1982-84	16	
Firebird 1985-92	16	
Firebird 1993-02	19	
Grand Am 1985-91*	9	
Grand Am 1992-95*	19	
Grand Am 1996-98	19	
Grand Am 1999-00	19	
Grand Prix 1985-87*	9	
Grand Prix 1990-93	11	
Grand Prix 1994-96	19	
Grand Prix 1997-00	19	
Montana 1999	15	
Sunbird J-2000 1982-88	8	
Sunfire 1995-99	19	
TransSport 1990-95	11	
TransSport 1996	11	
TransSport 1997-98	11	
SATURN		
(all models) 1991-94	11	

Table of Contents (Ford & Mopar Applications)

Chrysler

Cirrus 1995-2000.....	23
Concorde 1993-1997.....	22
Cordoba 1975-1983.....	22
E-Class 1983-1993.....	22
5th Avenue 1979-1993.....	22
Imperial 1982-1983.....	22
Imperial 1990-1993.....	22
Laser 1984-1989.....	22
LeBaron 1977-1995.....	22
LeBaron GTS 1985-1995.....	22
LHS 1993-1998.....	22
Newport 1977-1981.....	22
New Yorker 1975-1996.....	22
Sebring 1995-2000.....	23
Sebring (conv)1996-1999.....	23
Town & Country 1990-2000.....	22

Ford

Aerostar 1985-1991.....	26
Bronco II 1983-1988.....	26
Country Squire 1979-1989.....	26
Crown Victoria 1983-1989.....	26
LTD 1979-1986.....	26
Ranger (mini)1983-1988.....	26
Thunderbird 1980-1988.....	26

Lincoln/Mercury

Lincoln Continental 1985-1989.....	26
Mark VII 1984-1988.....	26
Mercury Colony Park 1979-1989.....	26
Cougar 1983-1988.....	26
Cougar XR7 1980-1982.....	26
Grand Marquis 1979-1985.....	26
Marquis 1979-1988.....	26

Jeep

Eagle Vision 1993-1997.....	22
Jeep Cherokee 1997-2001.....	22
Grand Cherokee 1993-1995.....	25
Grand Cherokee 1996-1998.....	22
Wrangler 1997-2002.....	22

Dodge


Aries 1981-1989.....	22
Aspen 1976-1980.....	22
Avenger 1995-2000.....	24
Caravan 1984-2000.....	22
Charger 1974-1978.....	22
Charger 1981-1987.....	22
Dakota 1987-2000.....	22
Daytona 1984-1993.....	22
Diplomat 1976-1989.....	22
Durango 1997-2000.....	22
Dynasty 1988-1993.....	22
Intrepid 1993-1997.....	22
Lancer 1986-1989.....	22
Magnum XE1978-1997.....	22
Mirada 1979-1989.....	22
Neon 1995-1999.....	22

Omni 1978-1990.....	22
Pick-up 1974-1983.....	22
Ram 1994-2001.....	22
Ramcharger 1974-1993.....	22
Rampage 1978-1982.....	22
Shadow 1987-1995.....	22
Spirit 1989-1995.....	22
St. Regis 1979-1981.....	22
Stratus 1995-1999.....	23
Van 1978-2003.....	22
024 1978-1982.....	22
400 1982-1983.....	22
600 1983-1987.....	22



Plymouth

Acclaim 1989-1995.....	22
Breeze 1996-1999.....	23
Caravelle 1985-1987.....	22
Fury 1975-1978.....	22
Gran Fury 1978-1989.....	22
Horizon 1978-1983.....	22
Neon 1994-1999.....	22
Reliant 1981-1989.....	22
Scamp 1983-1984.....	22
Sundance 1987-1994.....	22
TC3 1978-1982.....	22
Trailduster 1975-1981.....	22
Turismo 1983-1987.....	22
Van 1978-1997.....	22
Volare 1976-1980.....	22
Voyager 1984-2000.....	22


What's in the Box (GM Parts)

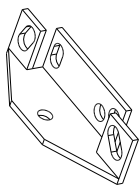


BRACKET 1
(L & R PAIR (2 PCS))

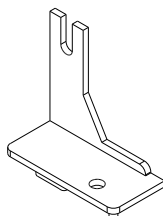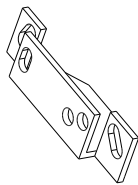


BRACKET 2
(1 PC)

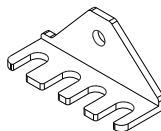


BRACKET 3
(1 PC)

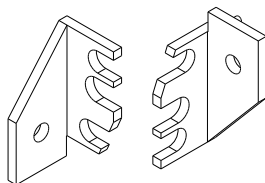


BRACKET 4
(L & R PAIR (2 PCS))

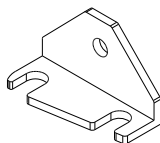


BRACKET 5
(1 PC)

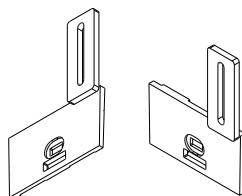


BRACKET 6
(L & R PAIR (2 PCS))

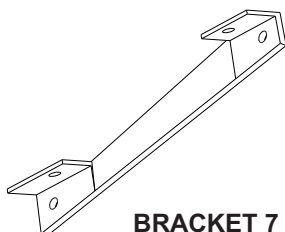


BRACKET 7
(1 PC)

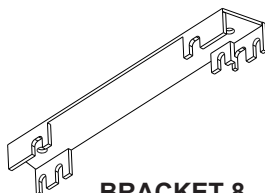


BRACKET 8
(1 PC)

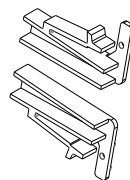


BRACKET 9
(L & R PAIR (2 PCS))

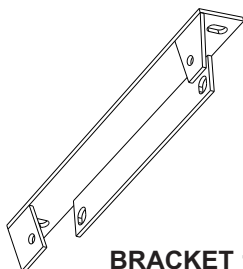


BRACKET 10
(1 PC)

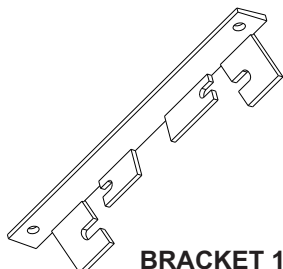

BRACKET 11
(1 PC)

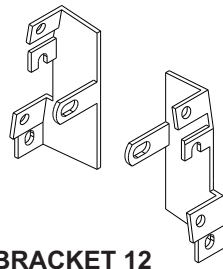


BRACKET 12
(L & R PAIR (2 PCS))

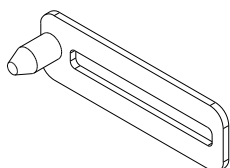


3.

BRACKET 13
(1 PC)

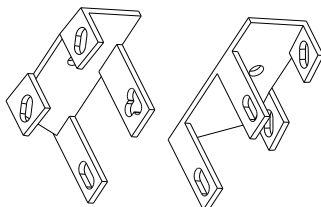


BRACKET 14
(L & R PAIR (2 PCS))


What's in the Box (Ford / Mopar Parts)

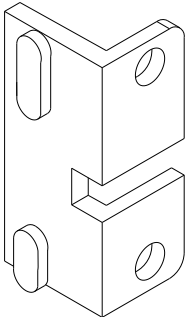


BRACKET A
(1 PC)

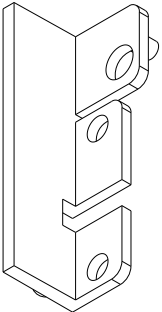

BRACKET B
(1 PC)

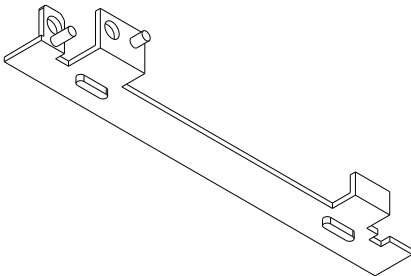

BRACKET C
(BOTTOM BRACKET)
(1 PC)

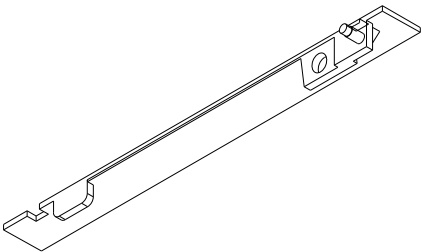

BRACKET D
(TOP BRACKET)
(1 PC)

Welcome

Thank you for your purchase. This assembly guide is used to assist you in using the enclosed plastic parts that came in your Newport box to affix the radio to your dash. Please note that some solutions listed utilize the original OEM brackets. If they are not available, we have done the best we can to supply an alternative to allow you to use our parts to mount the Newport into your dash.

Please note that throughout this guide you may be asked to modify, cut or trim our plastic parts to allow you to mount the Newport into your dash. Modifying our parts will not void your warranty; this is what they are designed for. Email or call our tech support at: support@retrosoundusa.com phone: 702-483-2222.

Notes

GM Application list

Application year ranges for GM vehicles (*note: asterisk by the vehicle listed means you use your existing radio brackets and mount them to your Newport using the 4 bolts and nuts included in your radio box.)

Buick	Chevrolet (continued)	Bonneville1994-1999
Century1982-1996*	Malibu1997-2000	Fiero1984-1988*
Electra1984-1990*	Monte Carlo1985-1988	Firebird1982-1984
Estate Wagon1984-1994*	Monte Carlo1995-1999	Firebird1985-1992
LeSabre1984-1994*	Nova1985-1988	Firebird1993-2002
Park Avenue1986-1994*	Pickup1995-2002	Grand Am1985-1991*
Reatta1990-1991*	S10 Blazer1982-1985	Grand Am1992-1995*
Regal1984-1987*	S10 Blazer1986-1994	Grand Am1996-1998
Riviera1983-1985*	S10 Pickup1982-1985	Grand Am1999-2000
Riviera1990-1995*	S10 Pickup1986-1993	Grand Prix1985-
Roadmaster1991-1994	S10 Pickup1998-2001	1987*
Skyhawk1982-1989*	Silverado1999-2002	Grand Prix1990-1993
Skylark1983-1985*	Suburban1989-1991*	Grand Prix1994-1996
Skylark1987-1989*	Suburban1995-2002	Grand Prix1997-2003
Skylark1990-1995*	Tahoe1995-2002	Montana1999
Cadillac	Van (full)1988-1995	Sunbird J-20001982-1988
Cimarron1982-1988	Venture1997-1999	Sunfire1995-1999
DeVille1985-1995*	GMC	TransSport1990-1995
Eldorado1984-1991*	Jimmy (full)1989-1991*	TransSport1996
Escalade1999-2002	Jimmy1998-2001	TransSport1997-1998
Fleetwood1985-1993*	S15 Jimmy1982-1985	Saturn
Seville1984-1991*	S15 Jimmy1986-1994	(all models)1991-1994
Chevrolet	S15 Pickup1982-1985	
Astro1985-1989	S15 Pickup1986-1993	
Astro1990-1995	Safari1985-1989	
Chevrolet (continued)	GMC (continued)	
Astro1996-2004	Safari1990-1995	
Beretta1991-1996	Safari1996-2004	
Blazer (full)1989-1991*	Savana1996-2000	
Blazer1998-2001	Sierra1995-2002	
Camaro1982-1984	Sonoma1998-2001	
Camaro1985-1992	Suburban1989-1991*	
Camaro1997-2002	Suburban1995-1999	
Caprice1991-1993	Van (full)1988-1995	
Caprice1994-1996	Yukon1995-2002	
Cavalier1982-1990	Oldsmobile	
Cavalier1991-1994	Achieva1992-1995*	
Cavalier1995-1999	Bravada1991-1994	
Celebrity1982-1983*	Cutlass Calais1984-1991*	
Celebrity1984-1987*	Cutlass Ciera1982-1996*	
Citation II1985*	Cutlass Supreme1984-1988*	
Corsica1991-1996	Delta 881986-1988*	
Corvette1984-1989*	Firenza1982-1989*	
Corvette1997-2004	Ninety-Eight1984-1990*	
El Camino1985-1988	Omega1983-1984	
Express1996-2000	Silhouette1990-1995	
Impala SS1994-1996	Silhouette1996	
Lumina1990-1994	Silhouette1997-1999	
Lumina1995-2000	Toronado1982-1985*	
Lumina APV1990-1995	Pontiac	
Lumina APV1996	60001982-1991	
	Bonneville1982-1986*	
	Bonneville1987-1993*	

Buick Century 1982-1996

Buick Electra 1984-1990

Buick Estate Wagon/LeSabre/Park Avenue 1984-1994

Buick Reatta 1990-1991

Buick Regal 1984-1987

Buick Riviera 1983-1985, 1990-1995

Once original radio is removed, please retain the factory radio brackets.


Note: if the original radio brackets are lost or missing, below is a recommended solution that may work for your vehicle. Please note that you may need to use and / or modify additional parts that are included, in order to mount the Newport to your dash.

Instructions if original brackets are missing from original radio

Note: We recommend that you use your original factory brackets for this year range of vehicles. if your original brackets are missing, damaged or lost, this solution approximates the original mounting, you will need to test fit this FIRST before mounting or modifying the brackets.


Use included bolts and nuts provided with Newport radio to fasten brackets to the side of the radio

Left side bracket #12

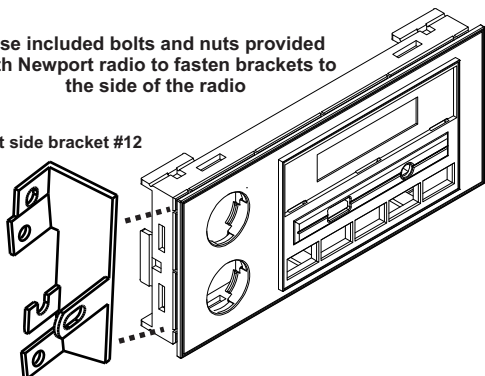


Left side of Newport radio

Right side bracket #12

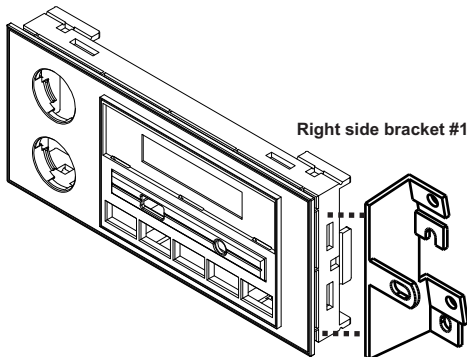

Right side of Newport radio

Alternate solution to try if the above brackets don't fit:

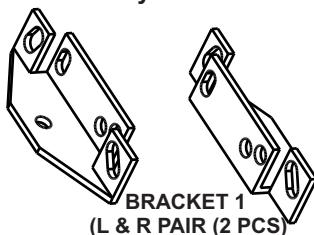

Buick Roadmaster 1991-1994

Chevrolet Caprice 1991-1993

Chevrolet Cavalier 1982-1990


Cadillac Cimarron 1982-1988

Pontiac Sunbird J-2000 1982-1988

Once original radio is removed, please use the included plastic bracket and included bolts and nuts to fasten bracket # 10 to the bottom of the Newport radio

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

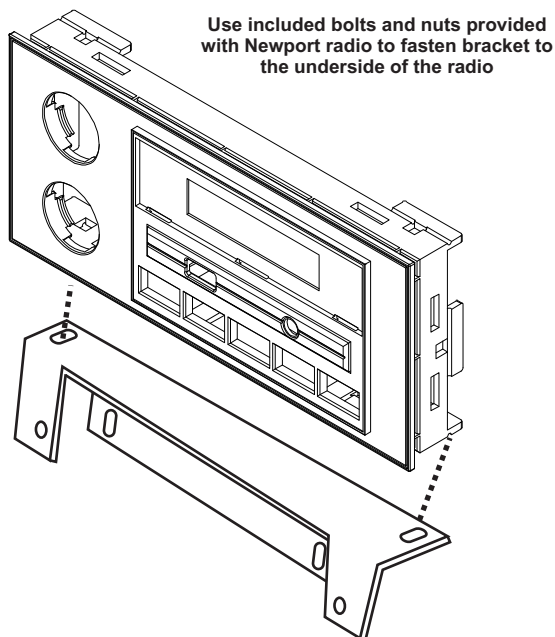


Mount bracket #10 to underside of Newport radio

Buick Skyhawk/Oldsmobile Firenza 1982-1989	Chevrolet Blazer (full size)
Buick Skylark 1983-1985	Suburban/GMC Jimmy (full size)
Buick Skylark 1987-1989	Suburban 1989-1991
Buick Skylark 1990-1995	Chevrolet Celebrity 1982-1983
Cadillac Deville 1985-1995	Chevrolet Celebrity 1984-1989
Cadillac Fleetwood 1985-1993	Chevrolet Citation II 1985
Cadillac Eldorado/Seville 1984-1991	Chevrolet Corvette 1984-1989
Oldsmobile Cutlass Supreme 1984-1988	Oldsmobile 98 1984-1990
Oldsmobile Toronado 1982-1985	Delta 88 1986-1988
Pontiac Bonneville 1987-1993	Oldsmobile Achieva 1992-1995
Pontiac Fiero 1984-1988	Oldsmobile Cutlass Calais 1984-1991
Pontiac Grand Am 1985-1991	Oldsmobile Cutlass Ciera 1982-1996
Pontiac Grand Prix 1985-1987	
Bonneville 1982-1986	

Note: We recommend that you use your original factory brackets for these year ranges of vehicles. Please note that if your original brackets are missing, damaged or lost, this solution approximates the original mounting, you will need to test fit this **FIRST** before modifying or permanently mounting the brackets. Some of the vehicles listed above may use a top mount bracket only (most top bracket mount vehicles will use bracket # 8). For side mount bracketed vehicles, we recommend included brackets 12 or 1.

See illustrations below for bracket recommendations. (Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle, please make sure you test fit the brackets **BEFORE** installing them).

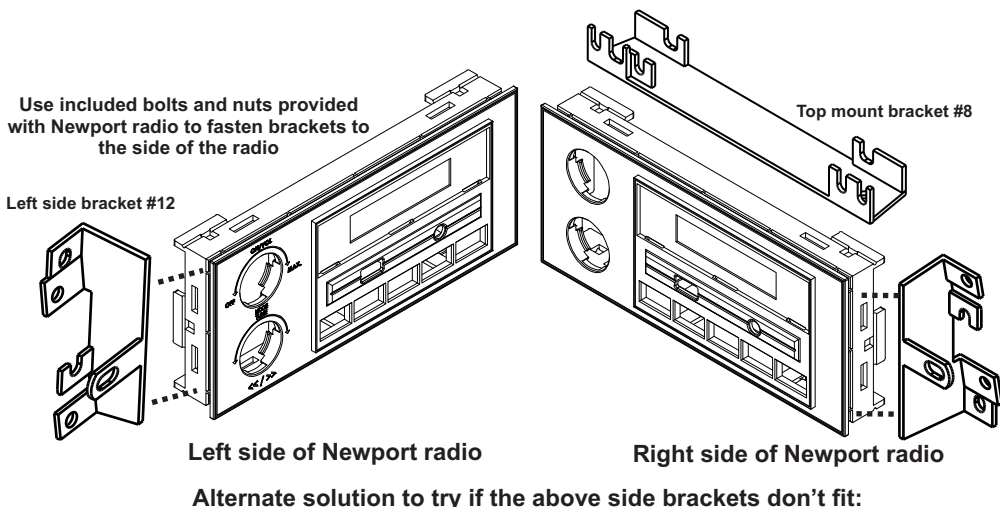

Cadillac Escalade/Chevrolet Silverado 1999-2002

Chevrolet Pickup/Suburban/Tahoe 1995-2002

GMC Sierra/Suburban/Yukon 1995-2002


Chevrolet Astro/GMC Safari 1996-2004

Chevrolet Express/GMC Savana 1996-2000

Once original radio is removed, please use the included plastic brackets and included bolts and nuts to fasten side bracket pair # 9 to the sides of the Newport radio.

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

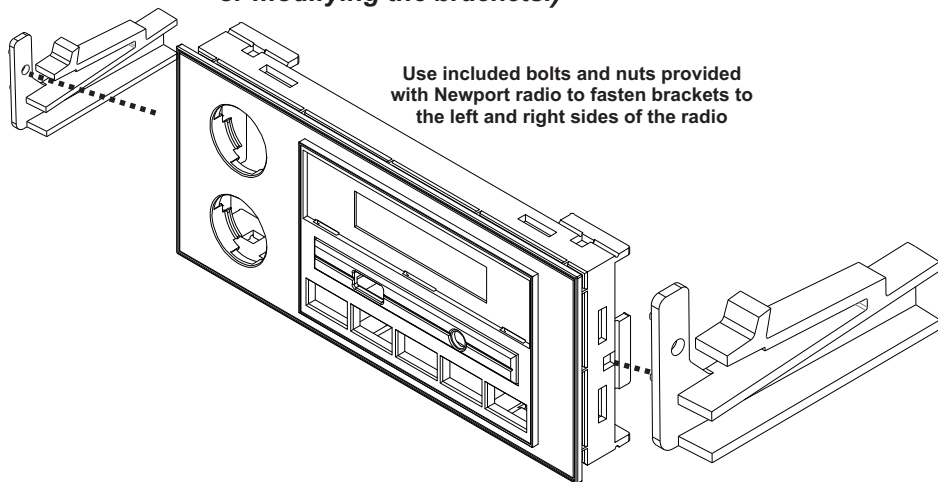


Use included bolts and nuts provided with Newport radio to fasten brackets to the left and right sides of the radio

Mount bracket # 9 to left & right sides of Newport radio

Chevrolet Lumina APV/Oldsmobile Silhouette/Pontiac TransSport 1990-1995
Chevrolet Lumina APV/Oldsmobile Silhouette/Pontiac TransSport 1996+
Pontiac Grand Prix 1990-1993
Saturn (all models) 1991-1994

Once original radio is removed, please use the included plastic bracket and included bolts and nuts to fasten top bracket # 8 to the top of the Newport radio

Bracket mount instructions
(IMPORTANT: You will need to
test fit this FIRST before mounting
or modifying the brackets.)

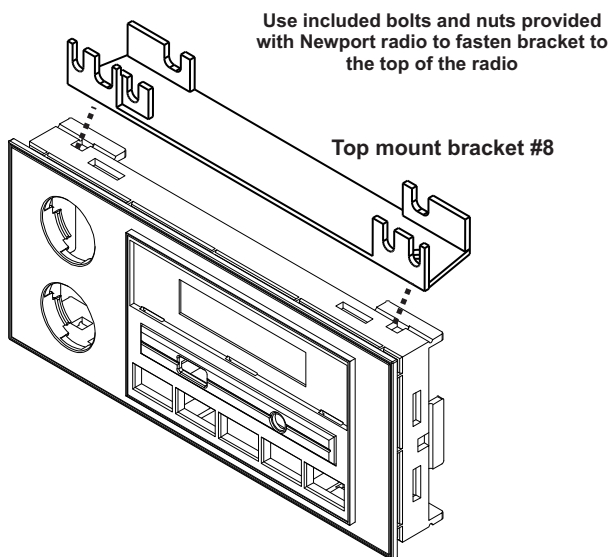

Mount bracket #8 to top of Newport radio
(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Please make sure you test fit the brackets BEFORE installing them).


Chevrolet Astro/GMC Safari 1985-1989

Chevrolet Cavalier 1991-1994

Once original radio is removed, please use the included plastic bracket and included bolts and nuts to fasten bottom bracket # 11 to the bottom of the Newport radio

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

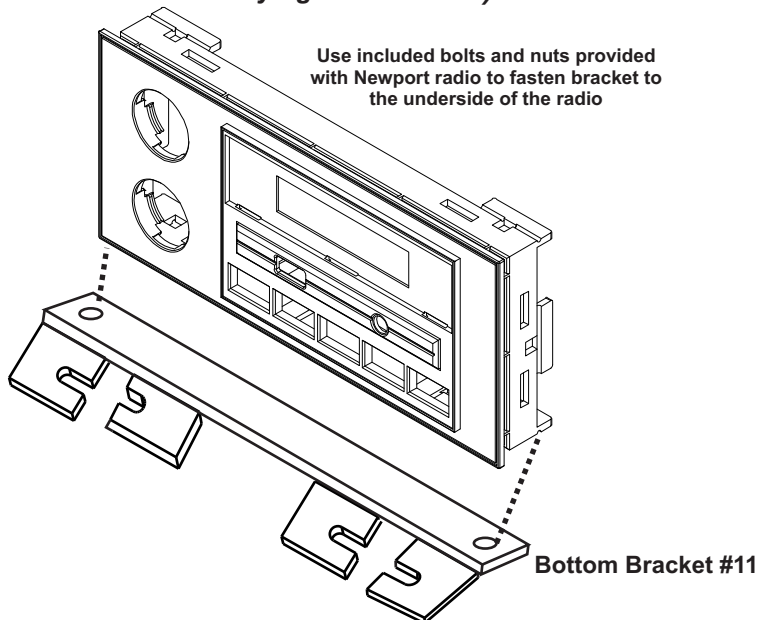

Mount bracket #11 to underside of Newport radio

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Please make sure you test fit the brackets BEFORE installing them).

Chevrolet Astro/GMC Safari 1990-1995

Chevrolet Nova 1985-1988

Chevrolet Van (full size) 1988-1995

GMC Van (full size) 1988-1995


Once original radio is removed, please use the included plastic brackets and included bolts and nuts to fasten side bracket pair # 12 to the sides of the Newport radio

Bracket mount instructions
(IMPORTANT: You will need to
test fit this FIRST before mounting
or modifying the brackets.)


Use included bolts and nuts provided
with Newport radio to fasten brackets to
the left and right sides of the radio

Use included bolts and nuts provided
with Newport radio to fasten brackets to
the side of the radio

Left side bracket #12

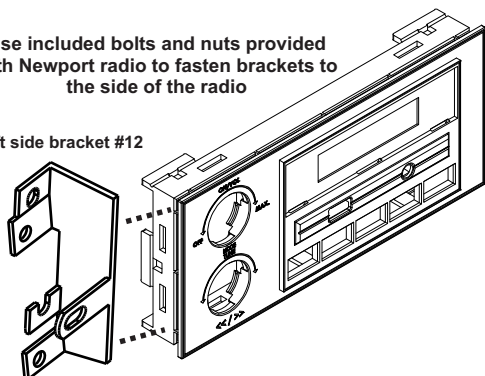

Left side of Newport radio

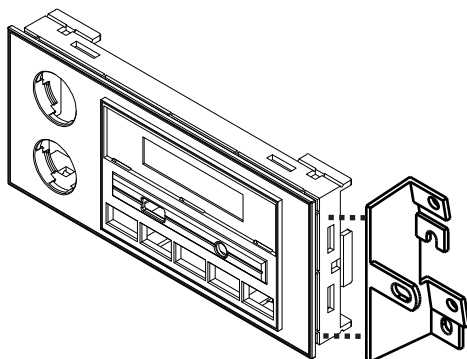

Right side of Newport radio


Mount brackets #12 to the side of Newport radio.
(Please note that you may need to remove some of the plastic
tabs of this brackets in order to customize it for your vehicle.
Make sure you test fit the brackets BEFORE installing them).

Chevrolet Beretta/Corsica 1991-1996

Once original radio is removed, please use the included plastic brackets and included bolts and nuts to fasten bottom bracket # 7 to the bottom of the Newport radio

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

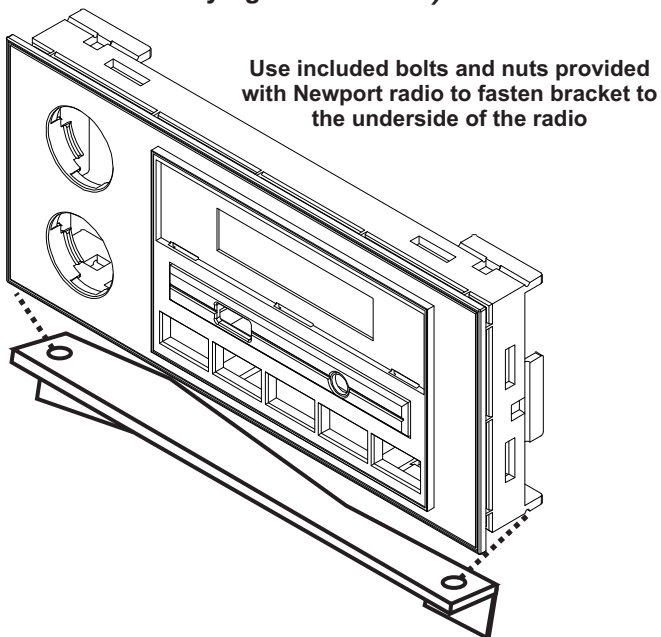

Bottom Bracket #7

Mount bracket #7 to bottom of Newport radio

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Please make sure you test fit the brackets BEFORE installing them).

Chevrolet Blazer/S-10 Pickup 1998-2001

GMC Jimmy/Sonoma 1998-2001

Chevrolet Camaro 1997-2002

Chevrolet Caprice/Impala SS 1994-1996

Chevrolet Cavalier 1995-1999

Chevrolet Corvette 1997-2004

Chevrolet Malibu 1997-2000

Chevrolet Lumina/Monte Carlo 1995-2000

Chevrolet Venture/Oldsmobile Silhouette 1997-1999

Pontiac Montana 1999/Transport 1997-1998

Once original radio is removed, please use the included plastic brackets and included bolts and nuts to the left & right bracket(s) # 4 to the sides of the Newport radio.

Bracket mount instructions


(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the sides of the radio

Use included bolts and nuts provided with Newport radio to fasten brackets to the side of the radio

Left side bracket #4

Right side bracket #4

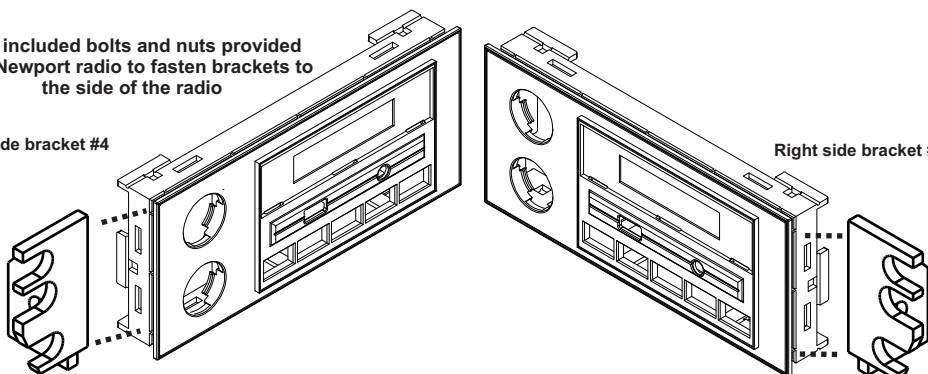

Left side of Newport radio

Right side of Newport radio

Mount bracket(s) #4 to the sides of the Newport radio.
(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Please make sure you test fit the brackets BEFORE installing them).

Chevrolet Camaro/Pontiac Firebird 1982-1984

Chevrolet Camaro/Pontiac Firebird 1985-1992

Chevrolet El Camino/ Monte Carlo 1985-1988

Oldsmobile Omega 1983-1984


Once original radio is removed, please use the included plastic brackets and included bolts and nuts to the left & right bracket(s) # 1 to the sides of the Newport radio.

Bracket mount instructions
(IMPORTANT: You will need to
test fit this FIRST before mounting
or modifying the brackets.)


Use included bolts and nuts provided
with Newport radio to fasten bracket to
the sides of the radio

Use included bolts and nuts provided
with Newport radio to fasten brackets to
the side of the radio

Left side bracket #1

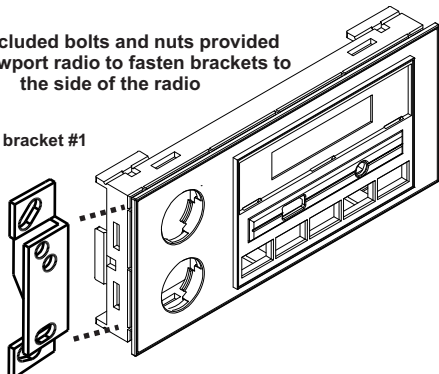

Left side of Newport radio

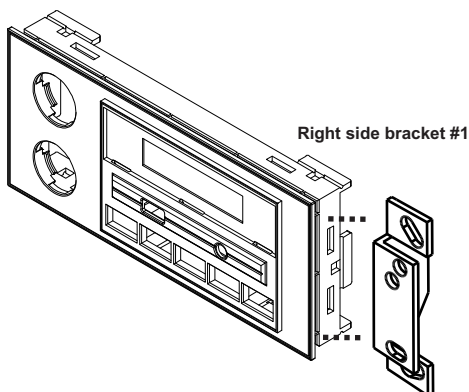

Right side of Newport radio

Mount bracket(s) #1 to the sides of the Newport radio.
(Please note that you may need to remove some of the plastic
tabs of this bracket in order to customize it for your vehicle.
Please make sure you test fit the brackets BEFORE installing
them).

GM, Ford and Mopar Plastic Mounting Kit Assembly Guide
Chevrolet S10 Pickup/S10 Blazer 1982-1985
GMC S15 Pickup/S15 Jimmy 1982-1985
Pontiac 6000 1982-1991




Once original radio is removed, please use the included plastic brackets and included bolts and nuts to the left & right bracket(s) # 14 to the bottom of the Newport radio.

Bracket mount instructions
(IMPORTANT: You will need to
test fit this FIRST before mounting
or modifying the brackets.)


Use included bolts and nuts provided
with Newport radio to fasten bracket to
the sides of the radio

Use included bolts and nuts provided
with Newport radio to fasten brackets to
the side of the radio

Left side bracket #14

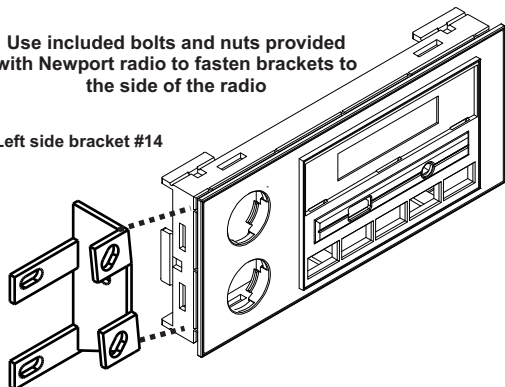

Left side of Newport radio

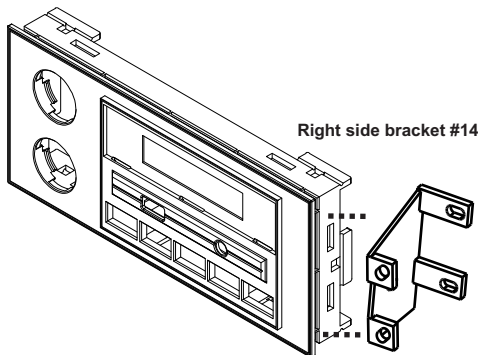

Right side bracket #14

Right side of Newport radio

Mount bracket(s) #14 to the sides of the Newport radio.
(Please note that you may need to remove some of the plastic
tabs of this bracket in order to customize it for your vehicle.
Please make sure you test fit the brackets BEFORE installing
them).

Chevrolet S10 Pickup 1986-1993

S10 Blazer 1986-1994

GMC SJ5 Pickup 1986-1993

S15, Jimmy 1986-1994

Oldsmobile Bravada 1991-1994


Once original radio is removed, please use the included plastic brackets and included bolts and nuts to the left & right bracket(s) # 2 & 14 to the sides of the Newport radio.

Bracket mount instructions
(IMPORTANT: You will need to
test fit this FIRST before mounting
or modifying the brackets.)


Use included bolts and nuts provided
with Newport radio to fasten bracket to
the sides of the radio

Use included bolts and nuts provided
with Newport radio to fasten brackets to
the side of the radio

Left side bracket #2

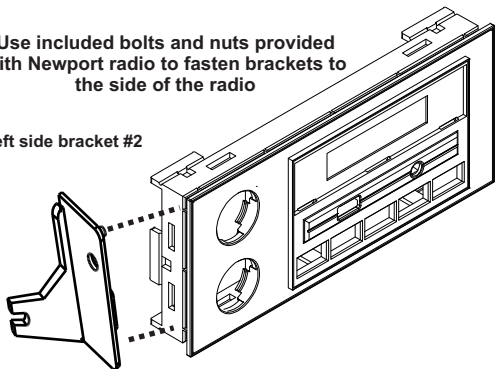

Left side of Newport radio

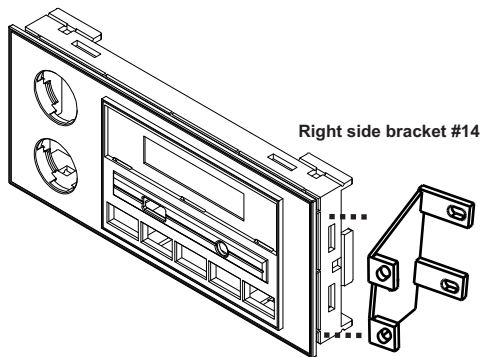

Right side bracket #14

Right side of Newport radio

Mount bracket(s) #2 & 14 to the sides of the Newport radio.
(Please note that you may need to remove some of the plastic
tabs of this bracket in order to customize it for your vehicle.
Please make sure you test fit the brackets BEFORE installing
them).

Pontiac Bonneville 1994-1999

Pontiac Firebird 1993-2002

Pontiac Grand Am 1996-1998

Pontiac Grand Am 1999-2000

Pontiac Grand Prix 1994-1996

Pontiac Grand Prix 1997-2003

Pontiac Sunfire 1995-1999

Once original radio is removed, please use the included plastic brackets and included bolts and nuts to the left & right bracket(s) # 3 & 5 to the sides of the Newport radio.


Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)


Use included bolts and nuts provided
with Newport radio to fasten bracket to
the sides of the radio

Use included bolts and nuts provided
with Newport radio to fasten brackets to
the side of the radio

Left side bracket #3

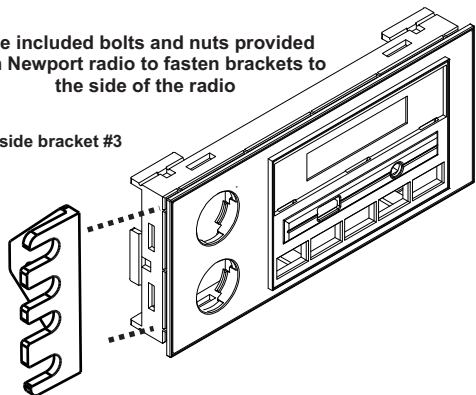

Left side of Newport radio

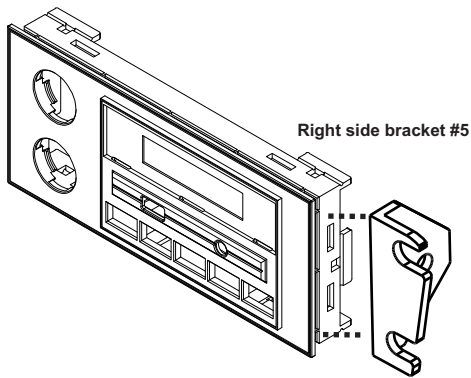


Right side bracket #5


Right side of Newport radio

Mount bracket(s) #3 & 5 to the sides of the Newport radio.
(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Please make sure you test fit the brackets BEFORE installing them).


(Ford / Mopar Parts)

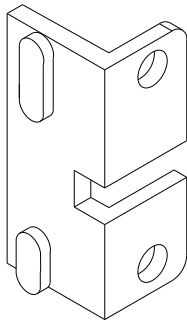


BRACKET A
(1 PC)

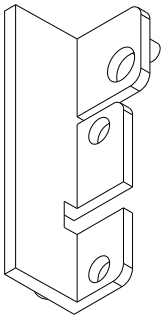

BRACKET B
(1 PC)

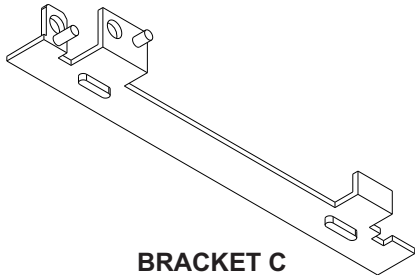

BRACKET C
(BOTTOM BRACKET)
(1 PC)

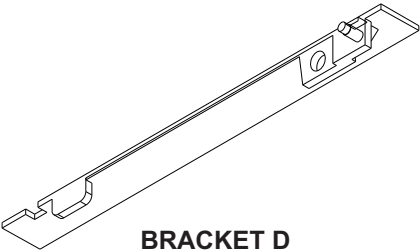

BRACKET D
(TOP BRACKET)
(1 PC)

Ford/Mopar Application list

Application year ranges for Ford and Mopar vehicles. Please view the included parts (see page XX)you received with your Newport radio purchase. Make sure you test fit BEFORE installing or modifying the plastic parts.

Chrysler

Cirrus 1995-2000
Concorde 1993-1997
Cordoba 1975-1983
E-Class 1983-1993
5th Avenue 1979-1993
Imperial 1982-1983
Imperial 1990-1993
Laser 1984-1989
LeBaron 1977-1995
LeBaron GTS 1985-1995
LHS 1993-1998
Newport 1977-1981
New Yorker 1975-1996
Sebring 1995-2000
Sebring (conv)1996-1999
Town & Country 1990-2000

Dodge

Aries 1981-1989
Aspen 1976-1980
Avenger 1995-2000
Caravan 1984-2000
Charger 1974-1978
Charger 1981-1987
Dakota 1987-2000
Daytona 1984-1993
Diplomat 1976-1989
Durango 1997-2000
Dynasty 1988-1993
Intrepid 1993-1997
Dodge (continued)
Lancer 1986-1989
Magnum XE 1978-1997
Mirada 1979-1989

Ford

Aerostar 1985-1991
Bronco II 1983-1988
Country Squire 1979-1989
Crown Victoria 1983-1989
LTD 1979-1986
Ranger (mini)1983-1988
Thunderbird 1980-1988

Lincoln/Mercury

Lincoln Continental 1985-1989
Mark VII 1984-1988
Mercury Colony Park 1979-1989
Cougar 1983-1988
Cougar XR7 1980-1982
Grand Marquis 1979-1985
Marquis 1979-1988

Jeep

Eagle Vision 1993-1997
Jeep Cherokee 1997-2001
Grand Cherokee 1993-1995
Grand Cherokee 1996-1998
Wrangler 1997-2002

Neon 1995-1999
Omni 1978-1990
Pick-up 1974-1983
Ram 1994-2001
Ramcharger 1974-1993
Rampage 1978-1982
Shadow 1987-1995
Spirit 1989-1995
St. Regis 1979-1981
Stratus 1995-1999
Van 1978-2003
024 1978-1982
400 1982-1983
600 1983-1987

Plymouth

Acclaim 1989-1995
Breeze 1996-1999
Caravelle 1985-1987
Fury 1975-1978
Gran Fury 1978-1989
Horizon 1978-1983
Neon 1994-1999
Reliant 1981-1989
Scamp 1983-1984
Sundance 1987-1994
TC3 1978-1982
Trailduster 1975-1981
Turismo 1983-1987
Van 1978-1997
Volare 1976-1980
Voyager 1984-2000

GM, Ford and Mopar Plastic Mounting Kit Assembly Guide
Chrysler/Dodge/Eagle/Jeep/Plymouth
(Except: Grand Cherokee 1993-1995, Cirrus,
Stratus, Sebring, Sebring convertible, and Avenger)

RetroSound®

Once original radio is removed, please attach the following brackets to the top, bottom and right side of the Newport:

TOP BRACKET # D

BOTTOM BRACKET # C


RIGHT SIDE BRACKET # B

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the top, bottom and right side of the Newport

Note: use circled tabs only, you will need to remove other tabs (it is important to test fit first).

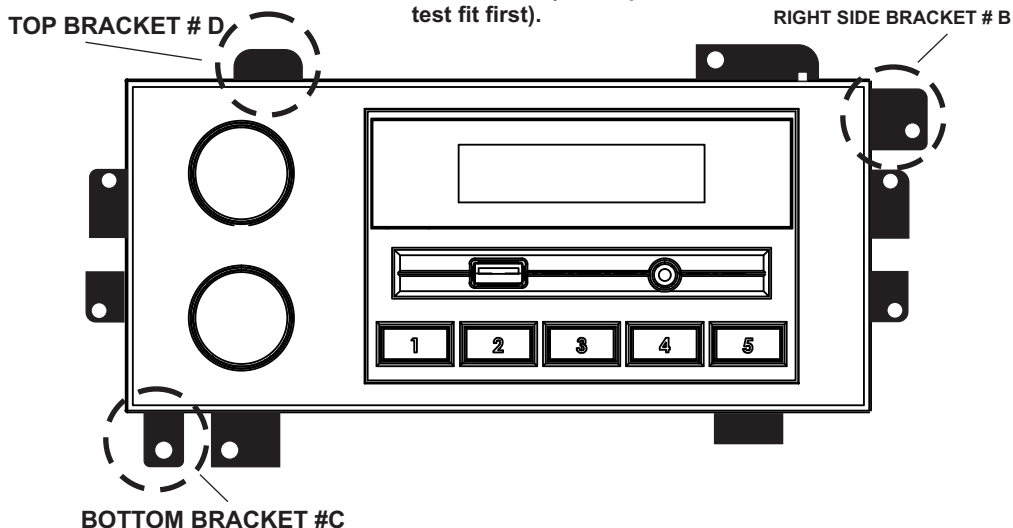

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Make sure you test fit the brackets **BEFORE** installing them).

Chrysler Cirrus 1995-2000
Sebring (convertible) 1996-2000
Dodge Stratus 1995-1999
Plymouth Breeze 1996-1999


Once original radio is removed, please attach the following brackets to the top, bottom and right side of the Newport:

TOP BRACKET # D
BOTTOM BRACKET # C
RIGHT SIDE BRACKET # B
LEFT SIDE BRACKET # A

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the top, bottom and right side of the Newport

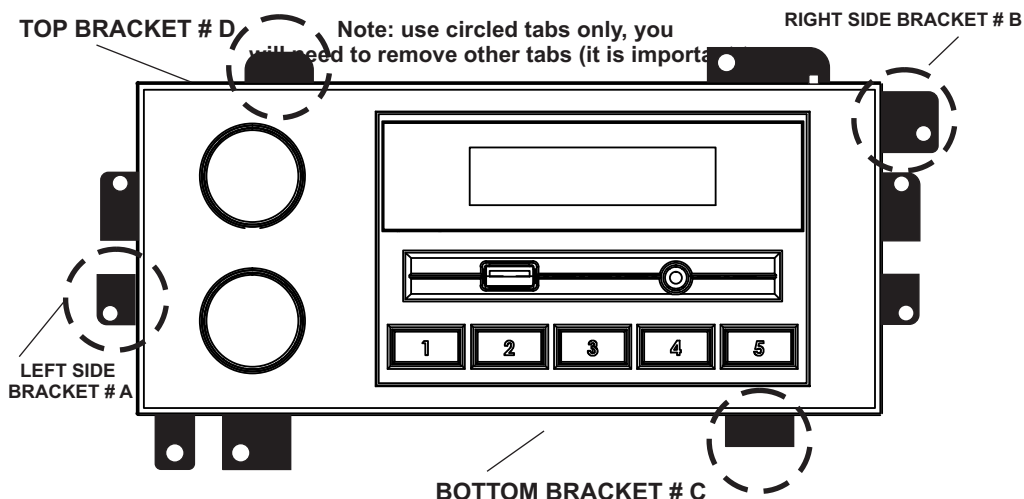

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Make sure you test fit the brackets **BEFORE** installing them).

Chrysler Sebring/Dodge Avenger 1995-2000

Once original radio is removed, please attach the following brackets to the top, bottom and right side of the Newport:

TOP BRACKET # D


BOTTOM BRACKET # C

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the top, bottom and right side of the Newport

Note: use circled tabs only, you will need to remove other tabs (it is important to test fit first).

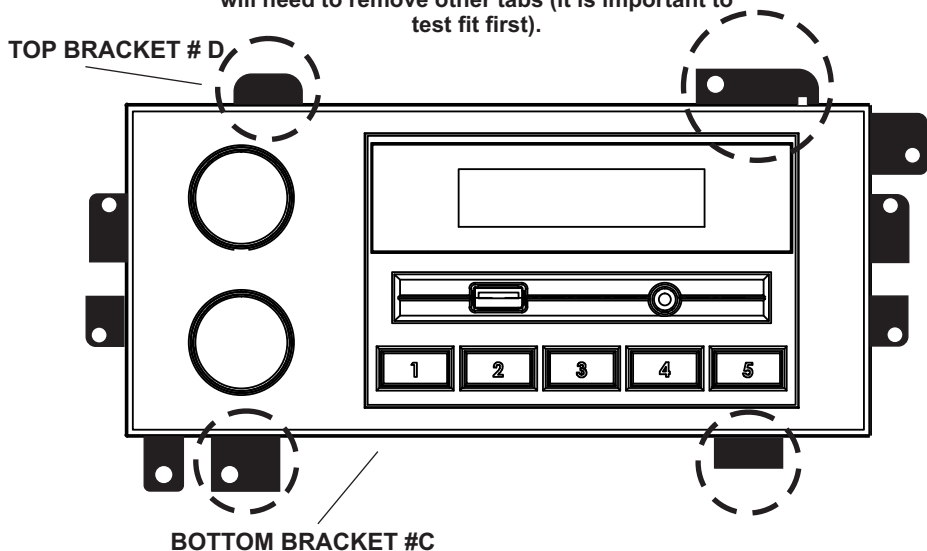

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Make sure you test fit the brackets BEFORE installing them).

Jeep Grand Cherokee 1993-1995

Once original radio is removed, please attach the following brackets to the top, bottom and right side of the Newport:

TOP BRACKET # D


BOTTOM BRACKET # C

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the top, bottom and right side of the Newport

Note: use circled tabs only, you will need to remove other tabs (it is important to test fit first).

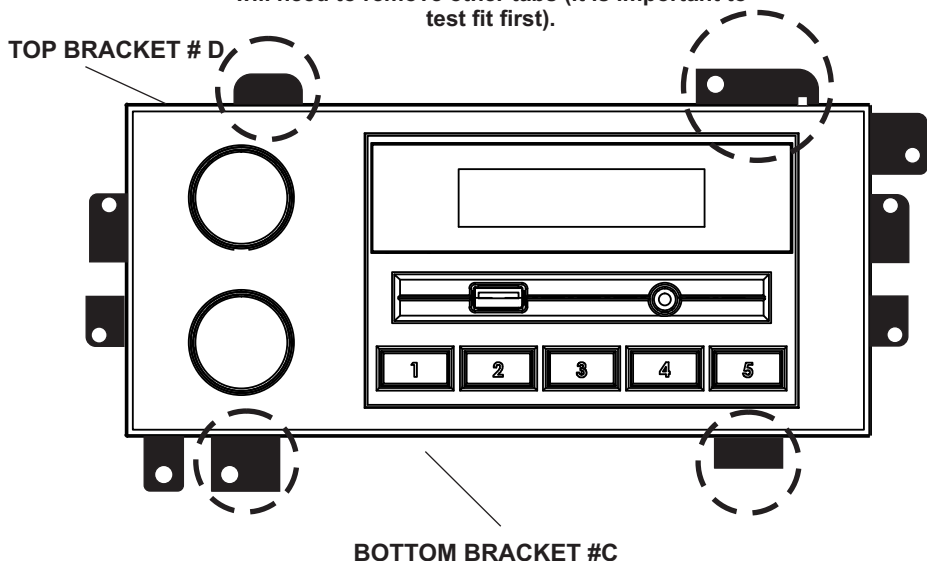

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Make sure you test fit the brackets BEFORE installing them).

Ford/Lincoln/Mercury 1974-2003

Once original radio is removed, please attach the following brackets to the top, bottom and right side of the Newport:


RIGHT SIDE BRACKET # B

LEFT SIDE BRACKET # A

Bracket mount instructions

(IMPORTANT: You will need to test fit this FIRST before mounting or modifying the brackets.)

Use included bolts and nuts provided with Newport radio to fasten bracket to the top, bottom and right side of the Newport
Note: use circled tabs only, you will need to remove other tabs (it is important to test fit first).

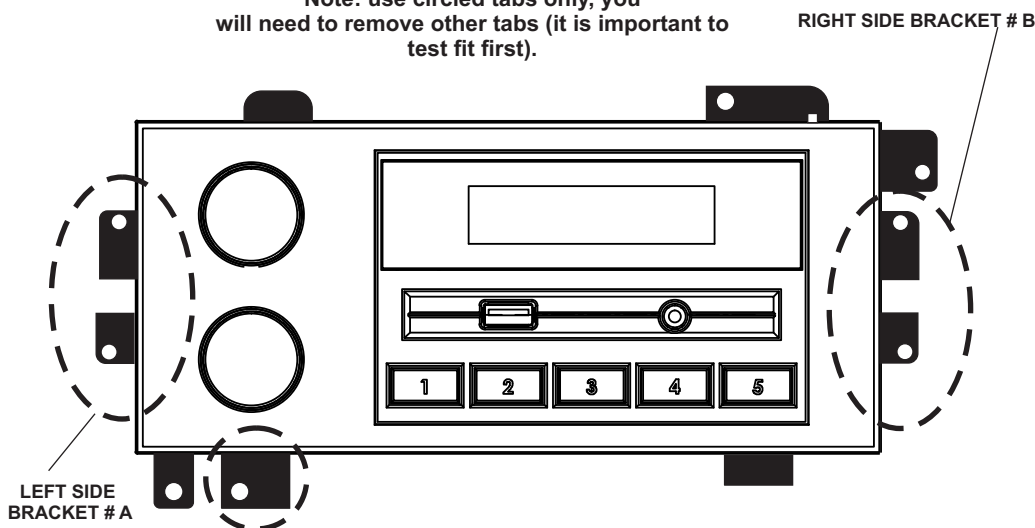

(Please note that you may need to remove some of the plastic tabs of this bracket in order to customize it for your vehicle. Make sure you test fit the brackets BEFORE installing them).

Vehicle wiring color codes

In your vehicle specific kit you received with the plastic parts, you'll find a year-specific wiring harness for your vehicle. This wiring harness plugs into your factory wiring harness. Once connected, you can then connect power, ground etc wiring to your Newport's power and speaker wiring harness. Below, you'll find for your vehicle specific color codes. Note that these are for reference only - always test your wiring to make sure they are correct. ***If your vehicle is equipped with a factory Delco/Bose sound system you will require a special adapter to install the Newport if you wish to retain your factory amplified speaker system.***

FORD

(Note: some late 1970's, early 1980's Ford vehicles may have a factory common ground system. You may need to re-wire the speakers or purchase a common ground adapter from your local car audio retailer.)

P o w e r

Memory (+12v Constant) Green Yellow

Ignition (+12v Switched) Yellow/Black

Ground (-) Black or Fat Red

Illumination Orange

Dimmer Orange/White

Power Antenna Blue (varies greatly)

S p e a k e r s

Right Front (+) White/Green

Right Front (-) Green/Orange

Left Front (+) Orange/Green

Left Front (-) Light Blue

Right Rear (+) Pink/Blue

Right Rear (-) Green/orange

Left Rear (+) Pink/green

Left Rear (-) Pink/Blue

DODGE/CHRYSLER

P o w e r

Memory (+12v Constant) Red/White

Ignition (+12v Switched) Red

Ground (-) Black or Braided Silver Wire

Illumination Orange

Dimmer (none)

Power Antenna Yellow

S p e a k e r s

Right Front (+) Violet

Right Front (-) Blue/Red

Left Front (+) Green

Left Front (-) Brown/Red

Right Rear (+) Blue/White

Right Rear (-) Blue/Red

Left Rear (+) Brown/Yellow

Left Rear (-) Brown/Red

GENERAL MOTORS

P o w e r

Memory (+12v Constant) Orange

Ignition (+12v Switched) Yellow

Ground (-) Black

Illumination Gray

Dimmer Brown

Power Antenna Pink

S p e a k e r s

Right Front (+) Light Green

Right Front (-) Dark Green

Left Front (+) Tan

Left Front (-) Gray

Right Rear (+) Dark Blue

Right Rear (-) Light Blue

Left Rear (+) Brown

Left Rear (-) Yellow

JEEP

P o w e r

Memory (+12v Constant) Pink

Ignition (+12v Switched) Violet/White

Ground (-) Black

Illumination Orange

Dimmer Blue/White

Power Antenna

S p e a k e r s

Right Front (+) White

Right Front (-) Black

Left Front (+) Green

Left Front (-) Black/Yellow

Right Rear (+) White/Black

Right Rear (-) Brown

Left Rear (+) Green/White

Left Rear (-) Brown/White



Assembly Guide for Plastic Mounting Kits for 1982-2004 GM, Mopar and Ford Vehicles



Retro Manufacturing, LLC
7390 Eastgate Road, Suite 140
Henderson, Nevada 89011
Phone: 702-483-2222
Fax: 702-483-2229
retrosoundusa.com
Technical Support:
support@retrosoundusa.com